


# Aquaporin Inside® HFFO®2 module

Hollow Fiber Forward Osmosis module




**High rejection of  
difficult compounds**

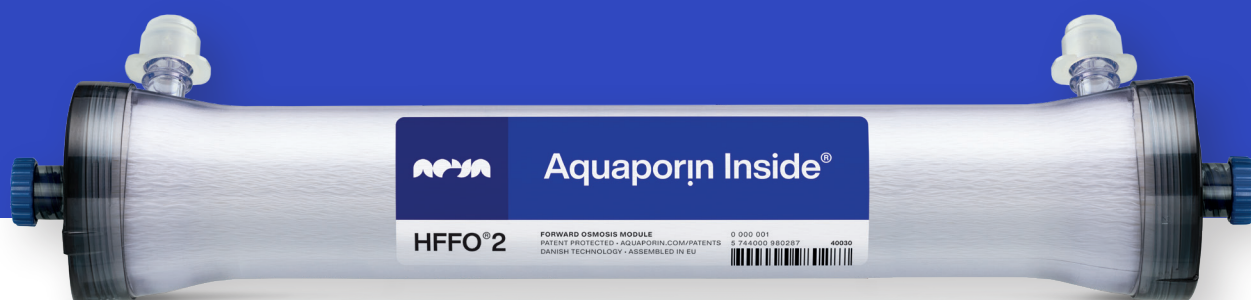

**Low specific  
reverse salt flux**



**High recovery  
of water**



**Low footprint due  
to high packing  
density**

## PRODUCT TYPE

The Aquaporin Inside® HFFO®2 module is designed for Forward Osmosis (FO) applications. Biomimetic hollow fiber module comprising an active layer of polyamide thin film composite (TFC) with integrated aquaporin proteins. The addition of aquaporin water channels into the rejection


layer makes the Aquaporin Inside® FO membrane capable of rejecting difficult contaminants and preserving valuable components. The use of hollow fibers allows for a very high packing density.

## PRODUCT SPECIFICATIONS

Product name	Fiber ID	Membrane area	Water flux	Specific reverse salt flux
Aquaporin Inside® HFFO®2 module	0.20 mm	2.3 m <sup>2</sup> 24.7 ft <sup>2</sup>	11 ± 1.5 LMH	0.15 ± 0.05 g/L

The stated product performance is based on following testing conditions: 0.5 M NaCl (2.9 %) draw vs DI water (FO mode), temperature: 25°C (77°F), single pass mode, counter-current flow, feed flow rate: 60 LPH, draw flow rate: 25 LPH, transmembrane pressure (TMP) feed to draw: 0.2 bar (2.9 psi).

**ELEMENT DIMENSIONS**

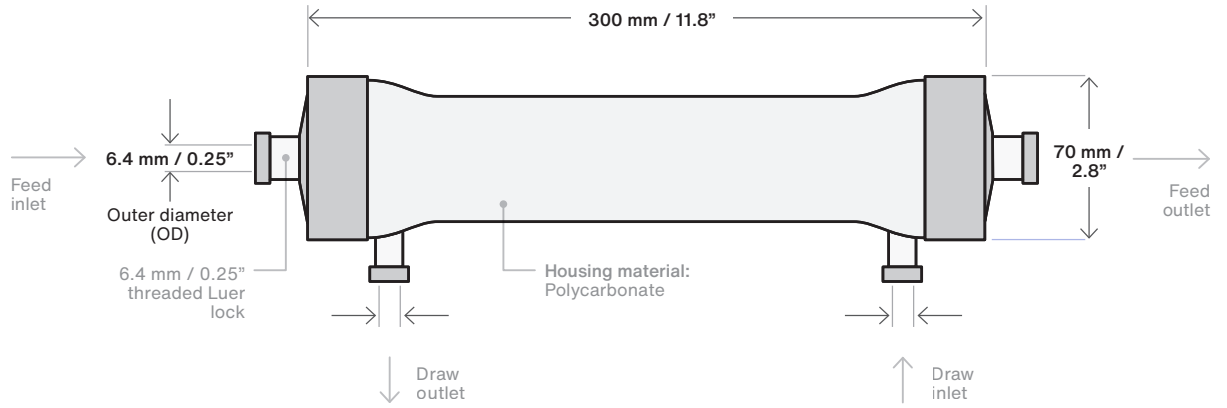

**RECOMMENDED OPERATING CONDITIONS**

Operating mode	Counter-current flow, inside-out
Transmembrane pressure (TMP) feed to draw	0.2 bar / 2.9 psi
Temperature range	5-30°C / 41-86°F
pH range	3-10
Pre-filtration <sup>a</sup>	≤ 50 µm

<sup>a</sup> The optimal pre-filtration is application dependent.  
<sup>b</sup> Under certain conditions, the presence of free chlorine and other oxidizing agents will cause premature membrane failure. Since oxidation damage is not covered under warranty, Aquaporin A/S recommends removing residual free chlorine by pre-treatment prior to membrane exposure.  
<sup>c</sup> Refer to cleaning guidelines in the User Manual.

**MAXIMUM OPERATING CONDITIONS**

Transmembrane pressure (TMP) feed to draw	≤ 4 bar / 58.0 psi
Feed inlet pressure	≤ 4 bar / 58.0 psi
Draw inlet pressure	≤ 2 bar / 29.0 psi
Max. particle size	≤ 50 µm
Free chlorine tolerance <sup>b</sup>	< 0.1 mg/L

**CLEAN-IN-PLACE (CIP)<sup>c</sup>**

Temperature	≤ 50°C / 122°F
pH range	2-11
Pressure	≤ 0.5 bar / 7.3 psi
Duration	≤ 20 min

**ADDITIONAL INFORMATION**

- ✓ Module can be operated in vertical and horizontal position.
- ✓ It is recommended to rinse the module for 30 min, prior to first use.
- ✓ It is advisable to pre-treat the feed solution to remove suspended solids. Particles might damage the fibers and possibly cause a decrease in performance.
- ✓ Run feed solution prior to draw solution to avoid osmotic drying of the membrane.
- ✓ Do not allow the module to run dry as this will compromise the membrane performance.
- ✓ Immediately flush the module on feed side with clean water for ≥ 30 min after use (draw side connections open).
- ✓ The module can be stored at room temperature, but preferred storage is at 4°C.
- ✓ Keep out of direct sunlight.
- ✓ To prevent biological growth during prolonged system shutdowns, the module should be immersed in a preservative solution. Rinse thoroughly before re-use.

- ✓ Keep the module moist at all times after initial wetting.
- ✓ The information provided in this document is for informative purposes only. It is the users own responsibility to ensure appropriate usage of this product. Aquaporin A/S assumes no obligation, liability or damages incurred for the misuse of the product or for the information provided in this document. This document does not express or imply any warranty as to the merchantability or fitness of the products.

**DISCLAIMER:** Aquaporin A/S shall not be liable nor responsible for direct, special, incidental, consequential, punitive or indirect losses or damages in connection with the furnishing, performance or use of this material. Aquaporin A/S cannot be held responsible for any technical or typographical errors or omissions and reserves the right to make changes to the products and datasheet without prior notice.

©2023 Aquaporin A/S. AQUA, HFFO and Aquaporin Inside are a registered trademark or trademark application of Aquaporin A/S in various jurisdictions. All other company names and products may be trademarks or registered trademarks of their respective companies.

**Aquaporin A/S**  
 Nymøllevej 78  
 2800 Kongens Lyngby  
 Denmark

Phone: +45 8230 3082  
 sales@aquaporin.com  
 aquaporin.com

**Aquaporin Inside®**